



**Official Tech Documents**  
The better way to get your HotBrick product up and running

## Firewalls HotBrick

## How To

How To setup a HotBrick Firewall behind a Netopia Router

### USA

7243 NW 54th Street  
33166  
Miami, FL  
[www.hotbrick.com](http://www.hotbrick.com)  
[support@hotbrick.com](mailto:support@hotbrick.com)

### EUROPE

Generatorstraat 26  
Hengelo (Ov), 7556 RC  
Amsterdam - Netherlands  
[www.hotbrick.nl](http://www.hotbrick.nl)  
[support@hotbrick.nl](mailto:support@hotbrick.nl)

### BRAZIL

Francisco Tramontano, 100  
05686-010  
São Paulo/SP  
[www.hotbrick.com.br](http://www.hotbrick.com.br)  
[suporte@hotbrick.com.br](mailto:suporte@hotbrick.com.br)

**USA**

7243 NW 54th Street  
Miami, FL 33166  
www.hotbrick.com  
support@hotbrick.com

**EUROPE**

Generatorstraat 26  
Hengelo (Ov), 7556 RC Amsterdam  
Netherlands  
www.hotbrick.nl

**BRAZIL**

Francisco Tramontano, 100  
05686-010 – São Paulo/SP  
www.hotbrick.com.br  
suporte@hotbrick.com.br

## ***Netopia Setup with HotBrick Firewalls***

If the client has a range of static (public) IP addresses and was given a Netopia (3300, 3500 series) router, you will have to disable the NAT on the Netopia. Here is the link:

[http://www.netopia.com/support/technotes/hardware/CQG\\_015.html](http://www.netopia.com/support/technotes/hardware/CQG_015.html)

If the client was given only one IP address and was also given a Netopia (3300, 3500 series) router, you will have to disable NAT with PPPoE and the routed subnet. Here is the link:

[http://www.netopia.com/support/technotes/hardware/CQG\\_042.html](http://www.netopia.com/support/technotes/hardware/CQG_042.html)

*All the information on the links above are of entire responsibility of their owners. HotBrick doesn't hold itself responsible for any information found on them. Those information may change without notice, according to their owner's interests.*